




Start Here

1. Power TV on

2. Select Input

3. Select   to Select the input Source

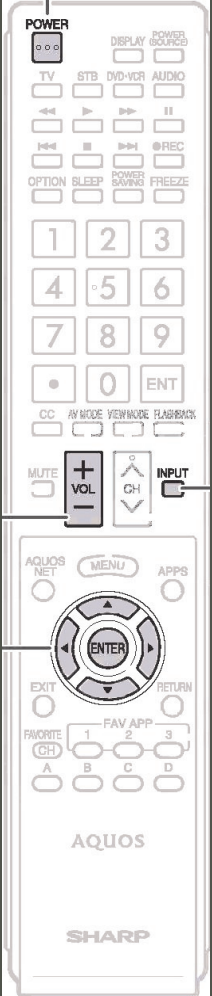

4. Volume

Input	Status
TV	Not Available
1 Desktop-PC	Available
2 CD/DVD/VHS	Available
3 HDMI-Lapto	Available
HDMI4	Not Available
COMPONENT	Not Available
VIDEO1	Not Available
VIDEO2	Not Available
8 VGA-Lapto	Available

1 Desktop-PC



Power ON the computer
Select "Student"
Password: student


Wireless Keyboard



Wireless Mouse



Press + hold + move mouse to move pointer

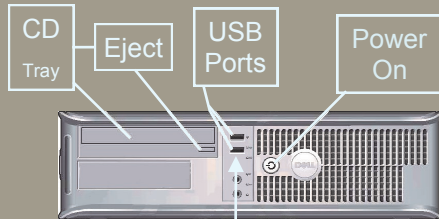


2 CD/DVD/VHS

1. Power Unit on

VHS

Inserting a Video Cassette

Insert a cassette.
- The unit turns on automatically.




To eject:
From the main unit:
EJECT - The unit turns on automatically.


OR
From the remote control

1 DRIVE SELECT to select the VHS drive.


2 STOP Press and hold for 3 or more seconds.

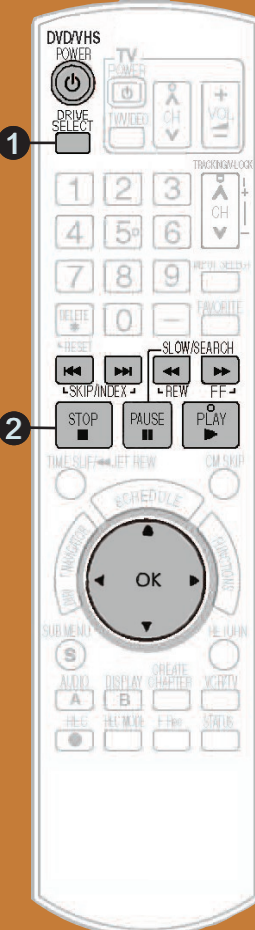

Eject **VHS Tray**

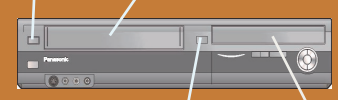


Eject **CD/DVD Tray**



CD/DVD

Inserting Discs


OPEN/CLOSE to open the tray.
- Insert a disc.
- Press [OPEN/CLOSE] again to close the tray.

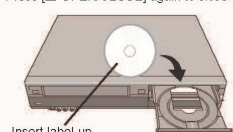

Insert label-up.



3

HDMI-Lapto

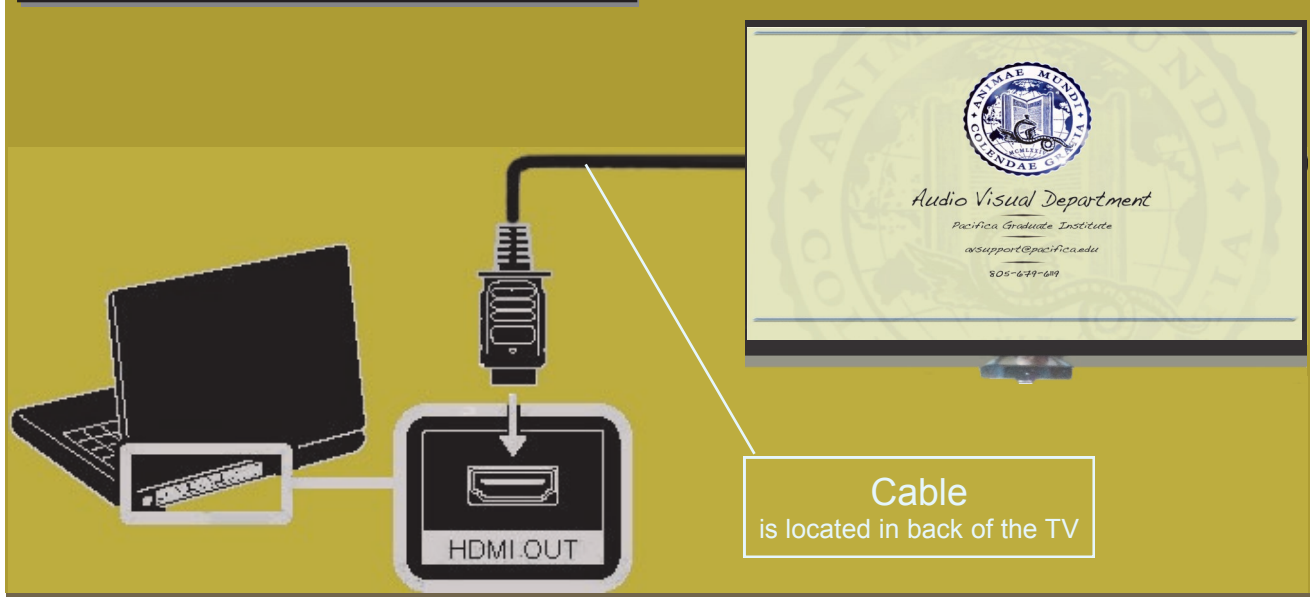

8

VGA-Laptop

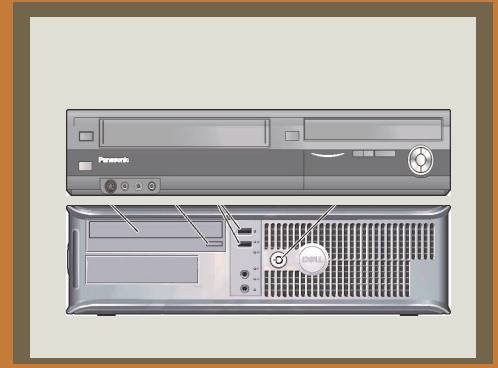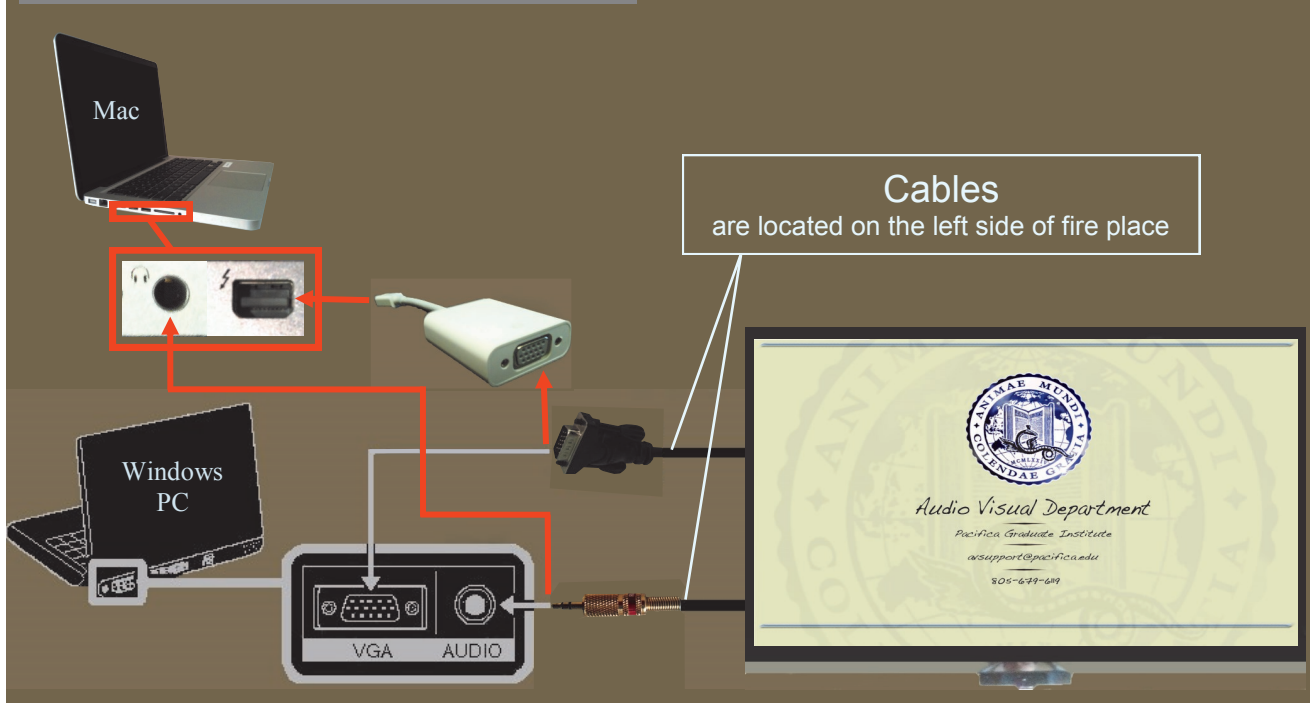

*Audio Visual
Equipment
Guide*

Contact us:
AV Support
805-679-6119
AVSupport@Pacifica.edu